

# Halter Bracket




Montageanweisung  
Assembly Instruction

Dräger

## MS-COM / Panorama Nova

R35027:


- ① 1x
- ② M4x25 1x
- ③ 2x
- ④ 1x
- ⑤ 1x

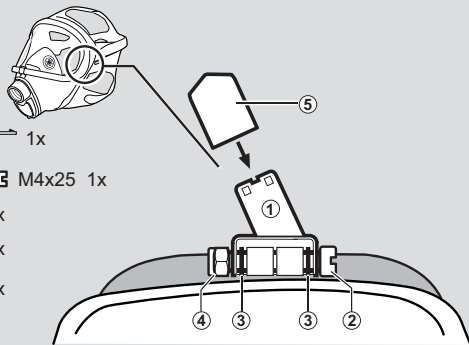

## MS-COM / f2

R35029:


- ① 1x
- ② M3x20 1x
- ③ 1x
- ④ 1x

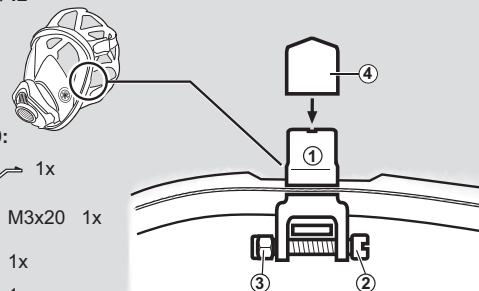

## MS-COM / Panorama Nova Supra

R35027:


- ① 1x
- ② M4x35 1x
- ③ 3x
- ④ 2x
- ⑤ 1x

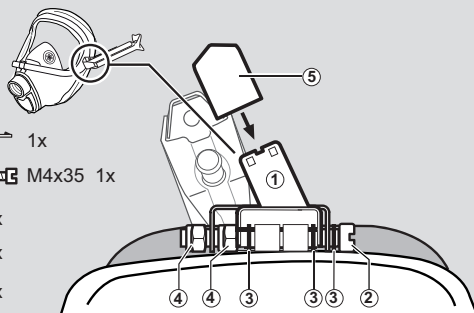

## MS-COM / f2 Supra

R35029:



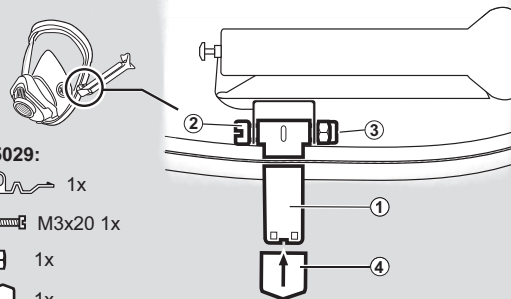


- ① 1x
- ② M3x20 1x
- ③ 1x
- ④ 1x




00121500.eps

### MS-COM UL 913 / DHR 7000






#### R58362:

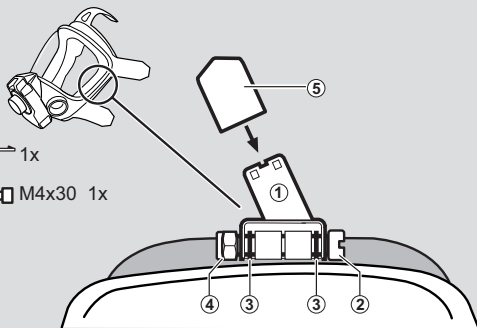
- ①  1x
- ②  M4x30 1x
- ③  2x
- ④  1x
- ⑤  1x



### MS-COM Extended / Panorama Nova



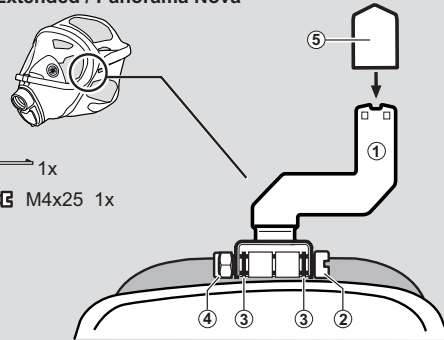

#### R35082:


- ①  1x
- ②  M4x25 1x
- ③  2x
- ④  1x
- ⑤  1x



### MS-COM / FPS 7000



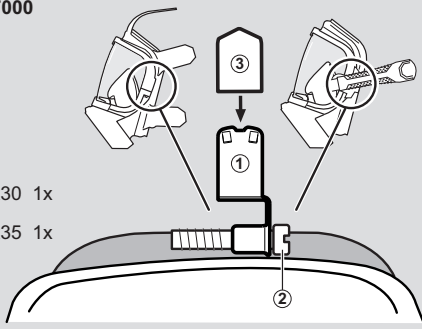


#### R56846:


- ①  1x
- ②  M4x30 1x
- ②  M4x35 1x
- ③  1x



### MS-COM Extended / Panorama Nova Supra

#### R35082:

- ①  1x
- ②  M4x35 1x
- ③  3x
- ④  2x
- ⑤  1x

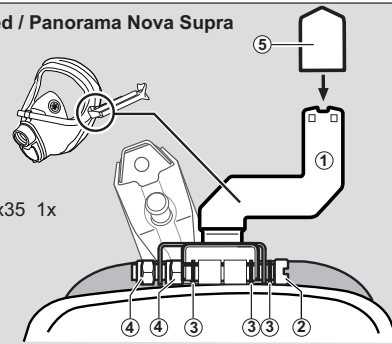

00221500.eps